


This guide will help you change or confirm your channel(s) on your receiver(s).


First, locate your digital converter box.





Have a television or monitor connected directly to the converter box. Make sure you can see the screen while operating the box.

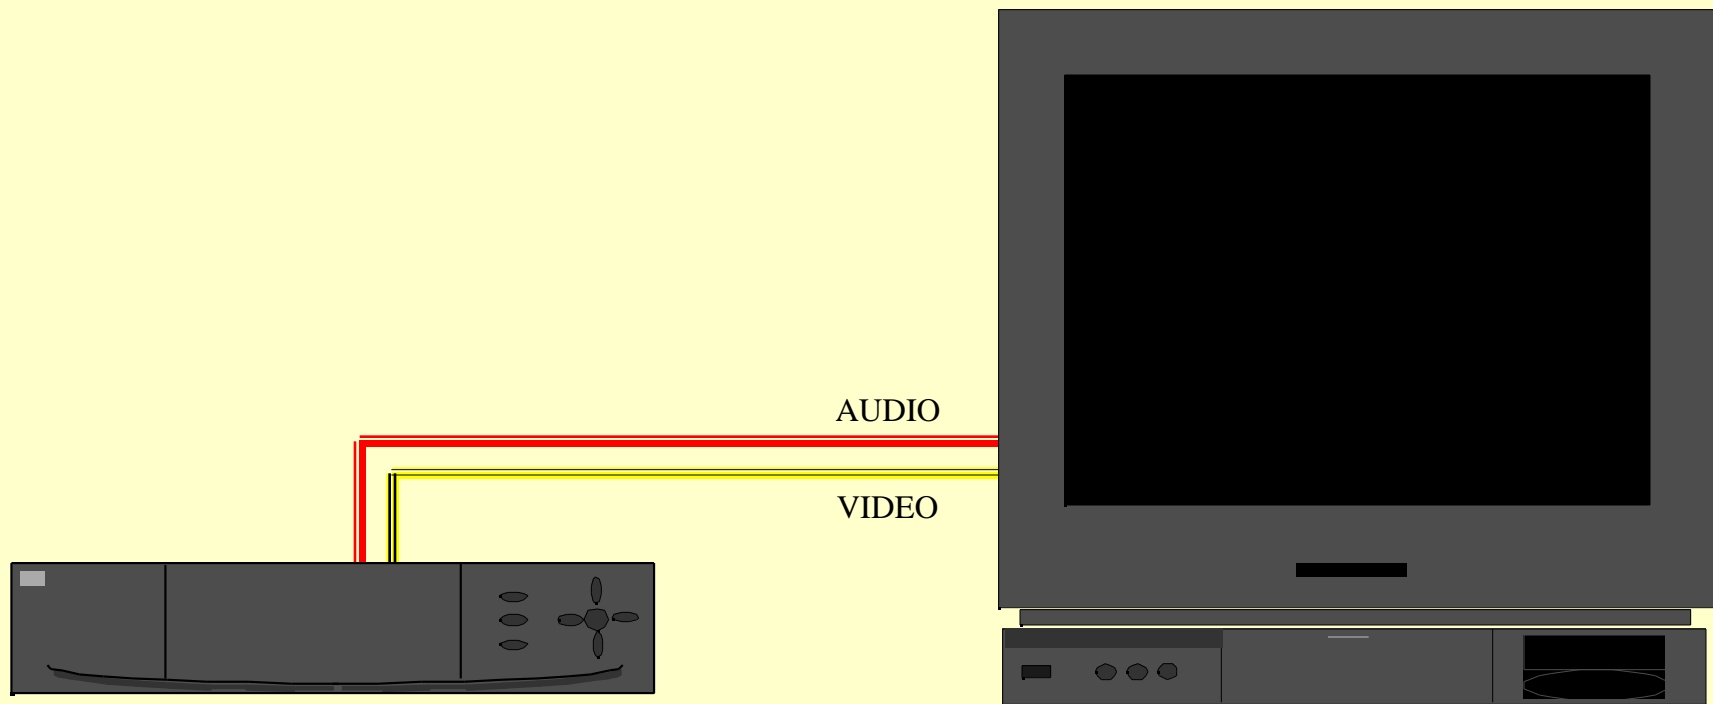

While viewing the picture press the **SELECT MENU** button on the right side of the box.

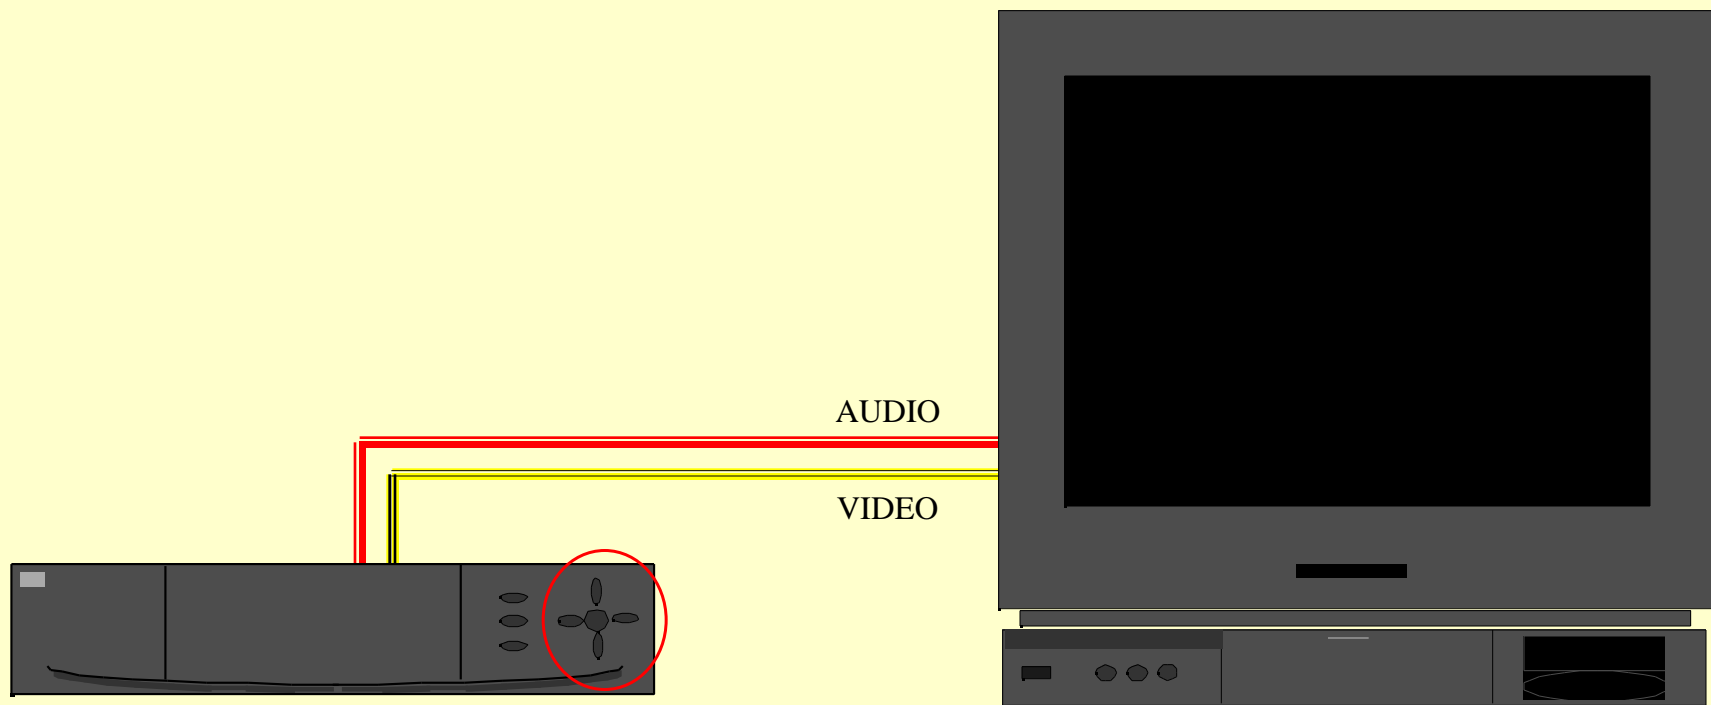

A menu box with a row of numbers should appear in the upper left corner of the screen.

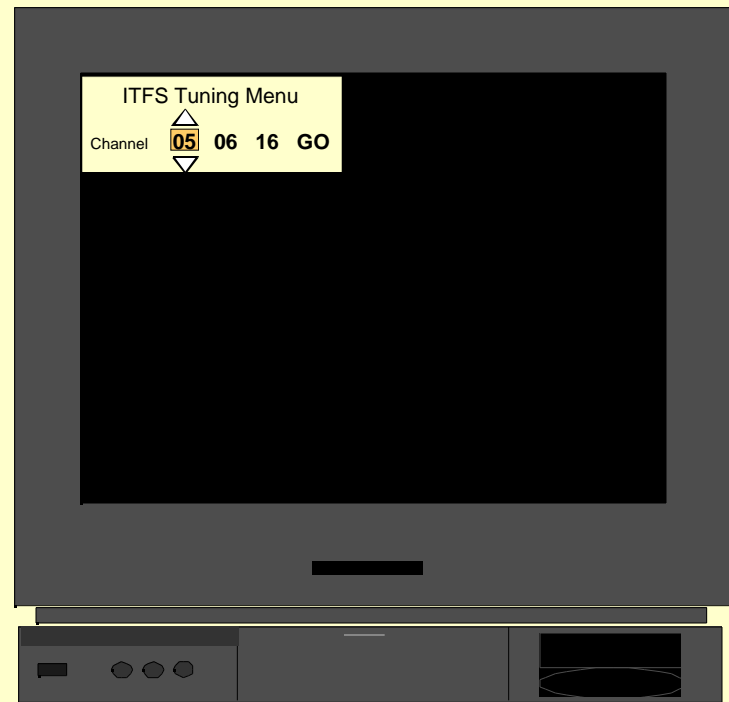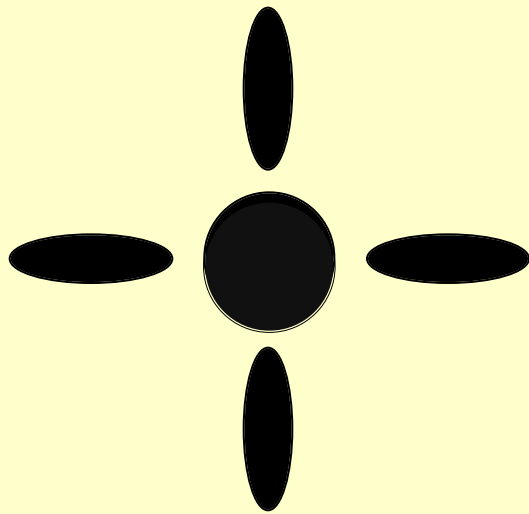



To change to a different channel you need to change the numbers in the menu box. Select the new channel you wish to receive from the list below.

Channel 1 = 01 02 16

Channel 2 = 03 04 16

Channel 3 = 05 06 16

Channel 4 = 07 08 16

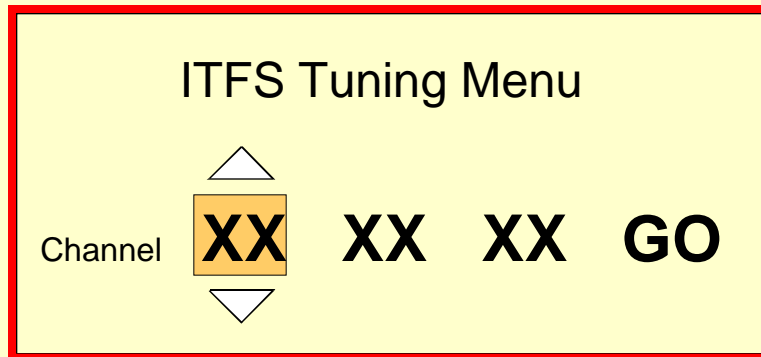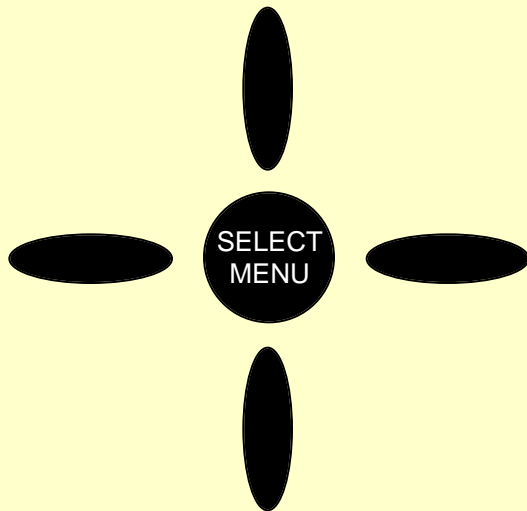



Use the top and bottom buttons to match the first digits of the new number.

Channel 1 = 01 02 16

Channel 2 = 03 04 16

Channel 3 = 05 06 16

Channel 4 = 07 08 16

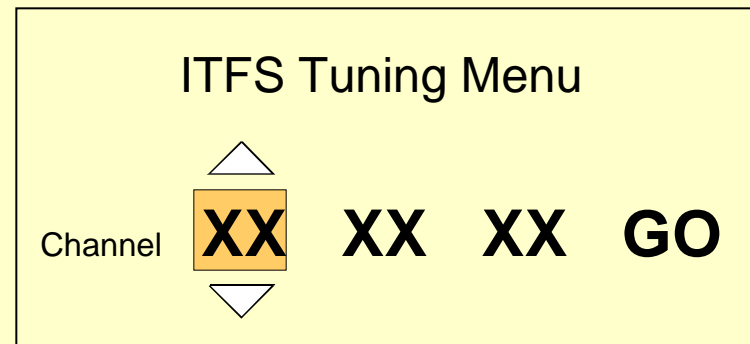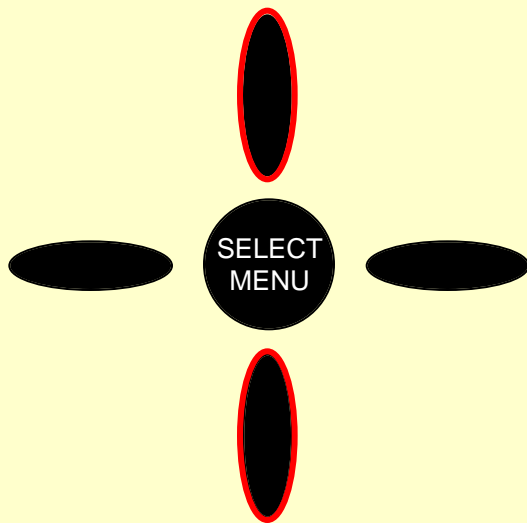



Use the left or right button to move the highlighted box to the next set of numbers and set with top and bottom buttons.

Channel 1 = 01 02 16

Channel 2 = 03 04 16

Channel 3 = 05 06 16

Channel 4 = 07 08 16

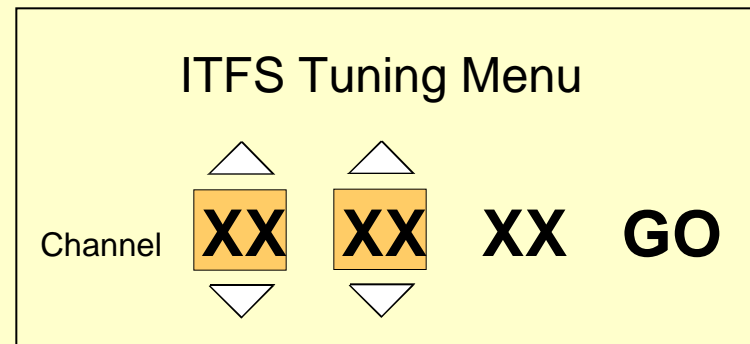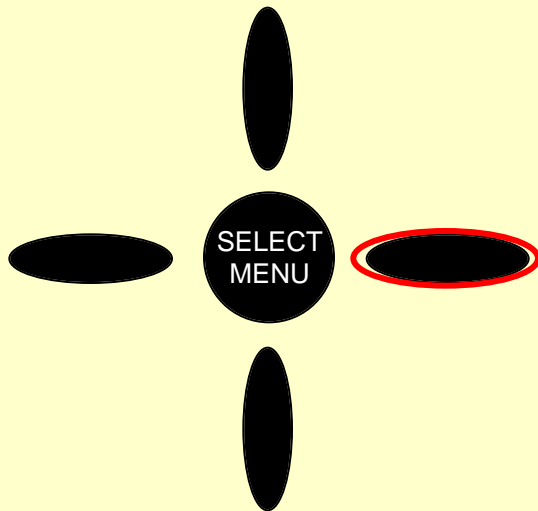



Repeat the two previous steps to set the 3rd set of digits.

Channel 1 = 01 02 16

Channel 2 = 03 04 16

Channel 3 = 05 06 16

Channel 4 = 07 08 16

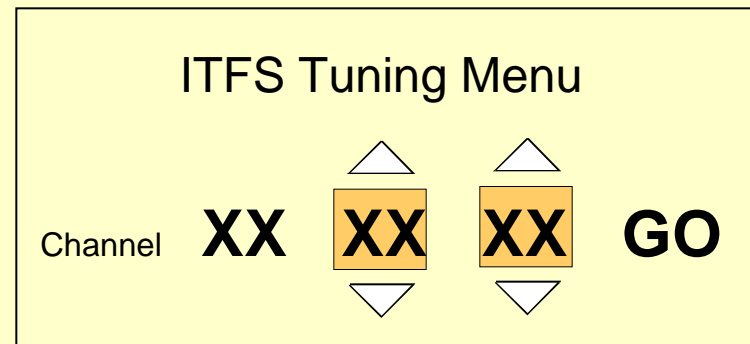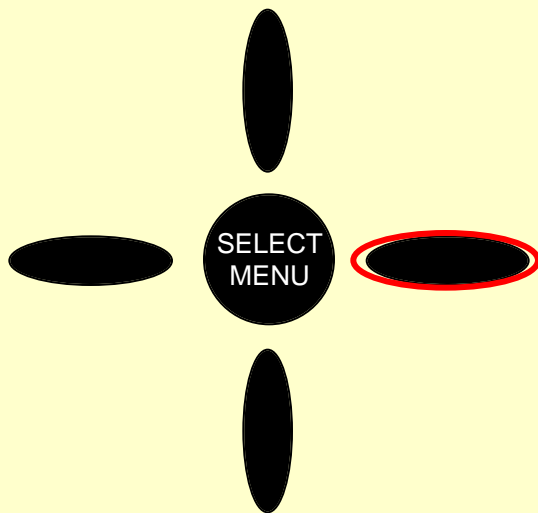



Use the left or right button to move the highlighted box to **GO**.

Channel 1 = 01 02 16

Channel 2 = 03 04 16

Channel 3 = 05 06 16

Channel 4 = 07 08 16

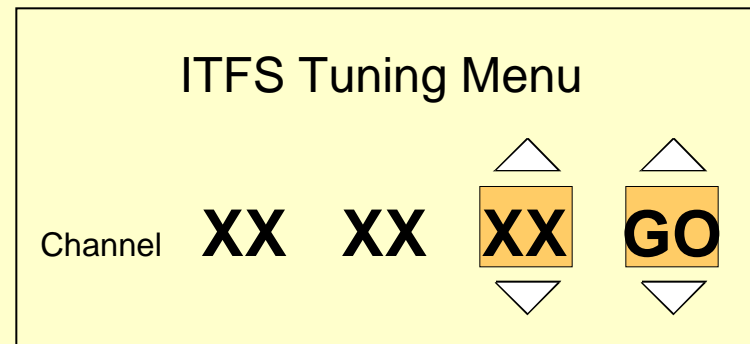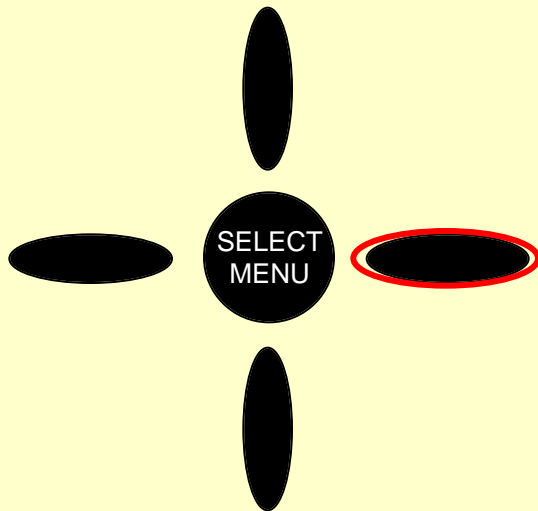

Press the **SELECT MENU** button. The picture will flash to black for a moment, then the new channel will appear on the screen.

